



## How to set the ID of LUMiBOX?

You can set the new ID (address) for the LUMiBOX using SEAK SLM Control software (download at <https://www.seakenergetics.com/en/files/our-software>).


1. Ensure that the LUMiBOX (1) is connected to the PC via SEAK RS485 cable (2).

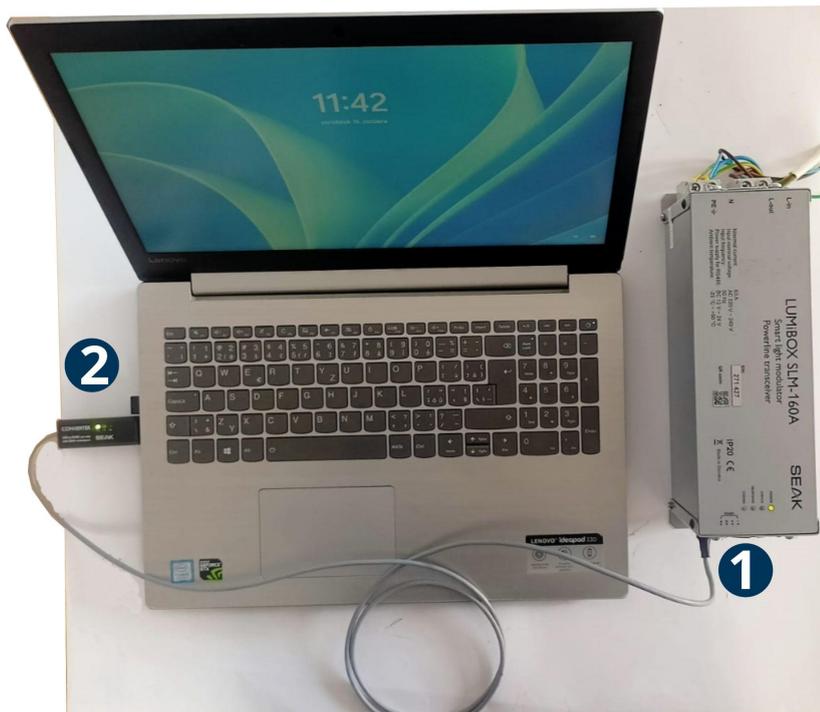

2. SLM control will automatically detect the device.

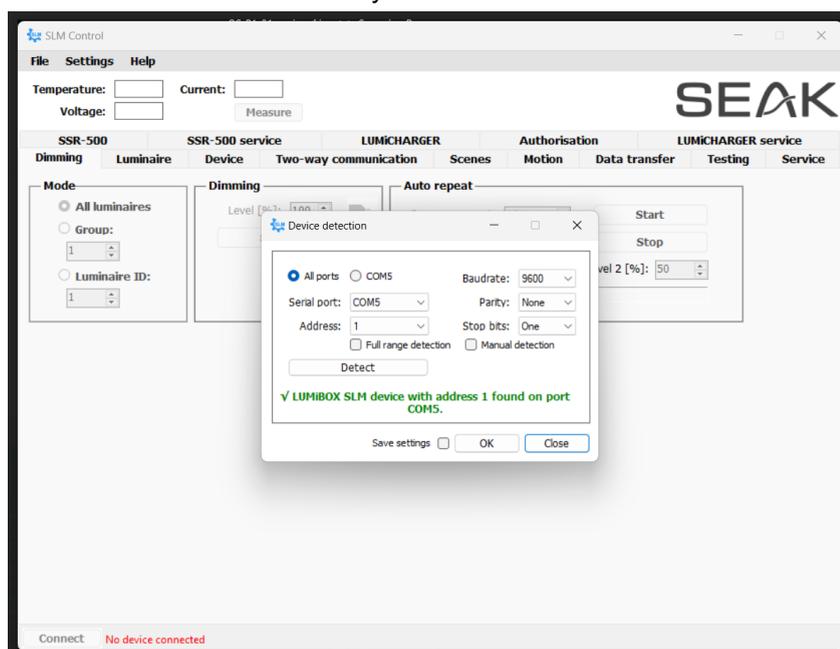

3. Click on the tab „Device“ (1). Enter the new address in the 'Changing address' field (2) and click 'Set'

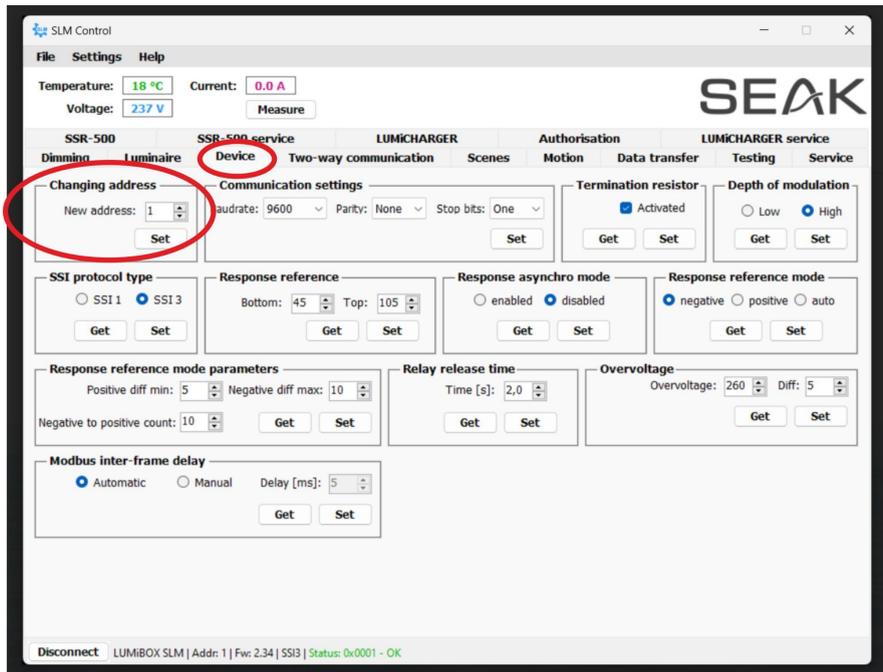

4. Restart the device (turn off/turn on). After restart, the Lumibox has a new address.